



B-Cubed 3107 Cube Feet (Set of 5)

Thank you for purchasing our products. Assembly of this product requires a phillips screwdriver.

Lay out parts on a non-abrasive surface to avoid scratching finish.

NO.	DRAWING	DESCRIPTION	Q'TY
A		CUBE FEET	5

NO.	DRAWING	DESCRIPTION	Q'TY
B		LEVELERS	5
C		HEADLESS ROD	5
D		ANTI TIP	1


Note: The 3107 Cube Feet are an optional set of feet that are attached to the Cube - Single 3201, Cube - Double 3202, Cube - Triple 3203, Cube - Quad 3204 or the Double - Double 3205 when one of these cubes are the base of a stack-a-ble configuration. The Anti Tip Kit is made available to secure a stack-a-ble configuration to the wall. See instructions w/kit for installation.

STEP 1

Identify and count all parts and hardware using diagram above.

Step 2

Identify the previously assembled cube or cubes that will be the base of a stack-a-ble configuration. Attach 4 feet to Single - Cube or 5 Feet to all other Cubes (any cube 30" Wide). Screw Headless Rod (C) into threaded inserts on under side of bottom (4 or 5 places). Attach Feet (A) by screwing them into the opposite end of headless rod. Square the feet up to the edges. Screw in Levelers (B).

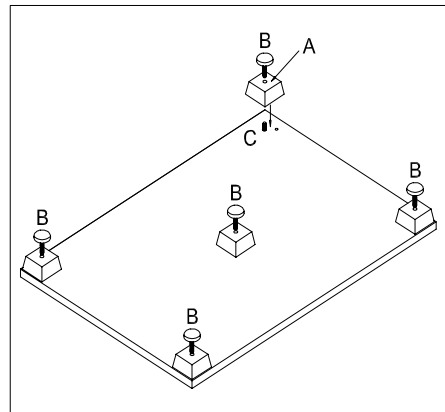

STEP 3

Position the assembled Cube w/ feet in desired location either as a free standing piece or as the base of a stack-a-ble configuration.