




**B-Cubed 3401 Door - Cube Single**

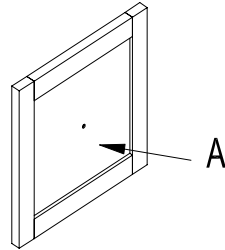


**Thank you for purchasing our products. Assembly of this product requires a phillips screwdriver.**

**Lay out parts on a non-abrasive surface to avoid scratching finish.**

NO.	DRAWING	DESCRIPTION	Q'TY
A		DOOR	1

NO.	DRAWING	DESCRIPTION	Q'TY
B		KNOB	1
C		KNOB SCREW	1
D		HINGE SCREWS	8
F		HINGES	2

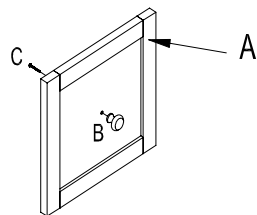


**Note: The Door - Cube - Single is an optional door that can be put on a 3201 Cube Single. It can be attached in a left hand or right hand orientation.**

**STEP 1**  
Identify and count all parts using diagram above.

**STEP 2**  
Identify and count all hardware.

**STEP 3**


Insert Hinge (F) into pre-drilled holes on back of Door (A) - two places. Secure hinges using screws (D) in pre-drilled pilot holes in door - 4 places. Determine left or right had orientation. Attached door to Cube End by aligning screws thru the hinge mounting plate into pre-drilled pilot holes in the Cube End. Tighten all screws. Note: Door may require adjustment for proper fit. Hinge is designed to allow for some adjustment.

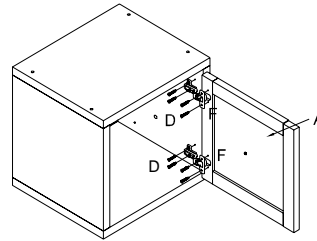

---

**STEP 4**

Attach Knob (B) to Door (A) using knob Screw (C)

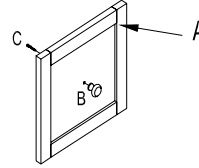

---

**STEP 5**

The Cube - Single w/ optional door is now complete. The Cube - Single w/ door can be used as a stand alone piece or one of the cubes within a stack-a-ble configuration.

